


# Model X for Carqon. Manual.


Lockride Model X for Carqon is easy to assemble yourself, but take your time. If you have any questions and/or comments, please feel free to contact [info@lockride.nl](mailto:info@lockride.nl).  
Required tools: **Torx T15, T25 & Inbus 4, 6, 8.**

## Step 1. Disassemble the box.

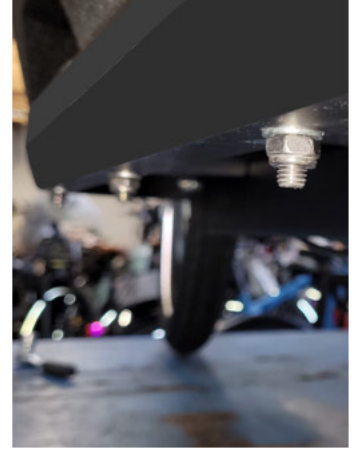

**1.1a** For Carqon Cruise; remove the required bolts from the safety bar, bench and the straps to take the box off the bike.

**1.1b** - For Carqon Classic; remove the bolts under the front frame holding the box.

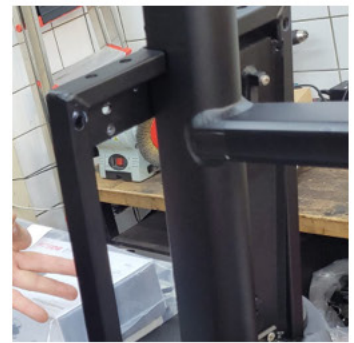

**1.2** First remove the safety bar and then the box.

**1.3** The box can now be lifted off the bicycle. 🙌

## Step 2. Disassemble the Bosch battery mount.



**2.1** Unscrew the upper battery mount from the plate.


**2.2** Unscrew the original battery mounting plate with hinge suspension.

**2.3** The frame is now ready for mounting the Lockride.

**Continue with Step 3. on the next page >>>**




### Step 3. Assemble the Lockride Model X.

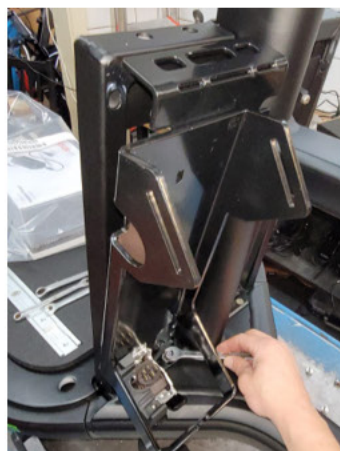

**3.1** Mount the Lockride Model X and the Bosch battery mount first on the supplied Carqon adapter, before mounting the adapter on the frame.


**3.2** Use the holes of the Bosch lock on the top and the holes of the docking on the bottom to mount the Model X with the supplied bolts. Do not fully tighten the bolts.

### Step 4. Mount the adapter.

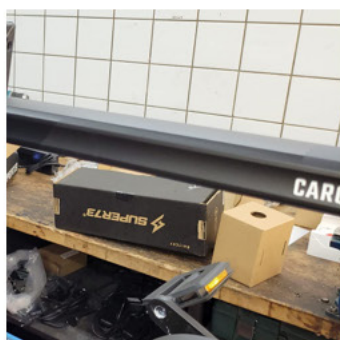

**4.1** Mount the Adapter with the Model X and the Bosch battery mount on it to the frame. Use the supplied M8 bolts on the top. The original nuts and bolts can be used on the underside (up-side-down).

### Step 5. Adjust the lock properly.

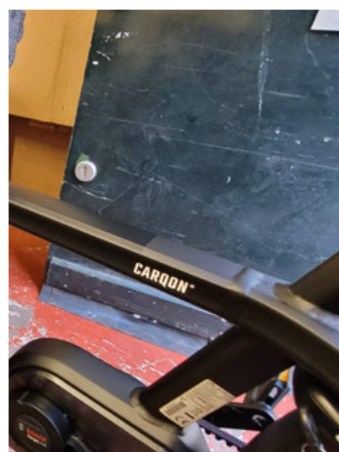

**5.1** Adjust the lock properly and then assemble the box, the straps and the bench.

**5.2** Ready, time to Lock and Ride! 🙌