


# Defender. Manual.

Lockride Defender is easy to mount on your Lovens cargo bike, just take your time. If you have any questions and/or comments, please feel free to contact [info@lockride.nl](mailto:info@lockride.nl). Tools needed: **Allen 5, 6.**

## Step 1. Unscrew the frame to make room for the battery lock.



**1.1** Remove the battery from the bicycle and slightly loosen the 2 Allen screws under the battery (maximum 3 rotations). **ATTENTION: never unscrew these bolts completely!**

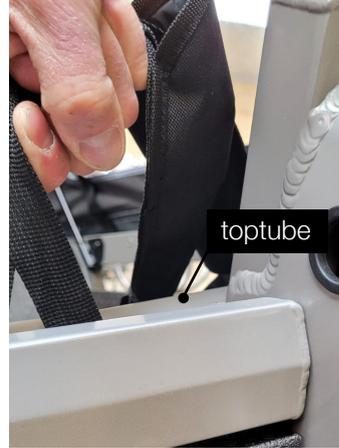

**1.2** Lift the top tube as far as possible to create space between the foam and the top tube.



## Step 2. Position the Lockride Defender.



**2.1** Place the Lockride with the two small hooks between the foam and the top tube.




**2.2** Tilt the lock vertically and now press the battery lock down along the top tube with considerable force. The foam will be pressed in slightly, but it will bounce back later. To prevent damage to the top tube, you can also use 2 plastic cards in the places between the top tube and the 2 hooks to guide the battery lock in the downward movement.

**2.3** Position the Lockride correctly in the middle of the battery mount.

### Step 3. Assemble the Lockride Defender.



3.1 Retighten the 2 bolts under the battery.

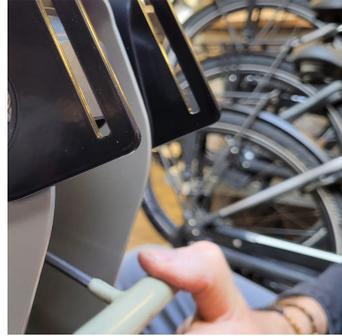

3.2 Place the battery back in the frame.



3.3 Mount the slide in the bracket and attach the Abus Diskus lock.