

Model X 545 for Urban Arrow Manual

The Lockride Model X 545 is easy to install. Feel free to contact us at info@lockride.nl with any questions and/or comments. Required tools: **Torx T10 & T15, Allen key 3 & 4, utility knife, flat-head screwdriver.**

Step 1. Remove the battery docking & the Bosch lock.



1.1 Remove the battery from the bike.




1.2 Unscrew the 3 Torx screws from the bottom of the docking. The cap can now be removed.



1.3 Click the cable loose from the bottom of the cable clamp.



1.4 Unscrew the top screw.

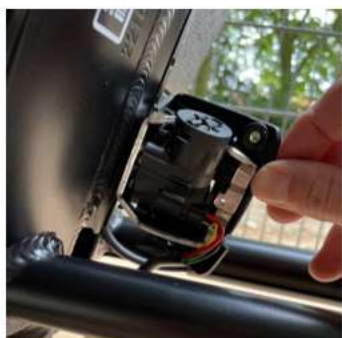

1.5 The docking can now be rotated.



1.6 The connector is held in place by 3 click tabs. Use a flat-head screwdriver to release the indicated tab (1).



1.7 Then release the other 2 tabs in the same way. The connector can now be detached.



1.8 Now unscrew the last screw of the connector and remove the entire docking.



1.9 Unscrew the Torx screw on the inside of the Bosch lock.



1.10 The plastic cap can then be removed.



1.11 Now also unscrew the 2 screws from the lock and remove the lock from the frame.



1.12 Now also unscrew the 2 screws from the lock and remove the lock from the frame.

Step 2. Install the Lockride battery lock.



2.1 Place the Lockride through the opening in the frame.



2.2 Hang the bracket on the top screw so your hands are free for the installation. Use the included M5x20mm bolts for this.



2.3 Screw the docking back onto the frame with the Lockride in between. Use the included M5x16 bolts for this.



2.4 Place the connector back and click the cable back into the clamp.



2.5 Also place the cap of the docking back and screw it tight.



2.6 The Bosch lock can now be reinstalled. Do not forget the black spacer and use the top screw first.



2.7 Then tighten the bottom screw lightly.




2.8 We will now check whether the battery clicks in properly. Place the plastic cap back into the Bosch lock without a screw. Then place the battery back into the docking. Don't forget to turn the Bosch lock to the locked position.



2.9 If the battery clicks in properly and there is no gap between the Bosch lock and the battery, the vertical position of the Bosch lock is correct.



2.10 Remove the cap from the Bosch lock and tighten the screws. After this, the cap can be placed back and secured.

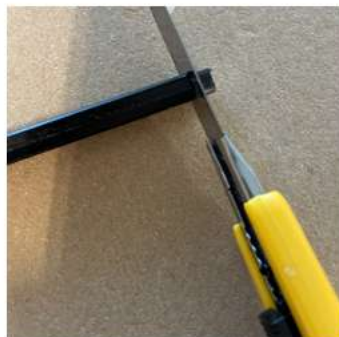

2.11 Remove ± 5 mm from the plastic strip with a utility knife so that the strip fits back in place. Click the strip back into the profile.



2.12 Place the battery and use the slider and the disc/padlock to lock your battery. 🍷